


CONTROLLER


MACHINE

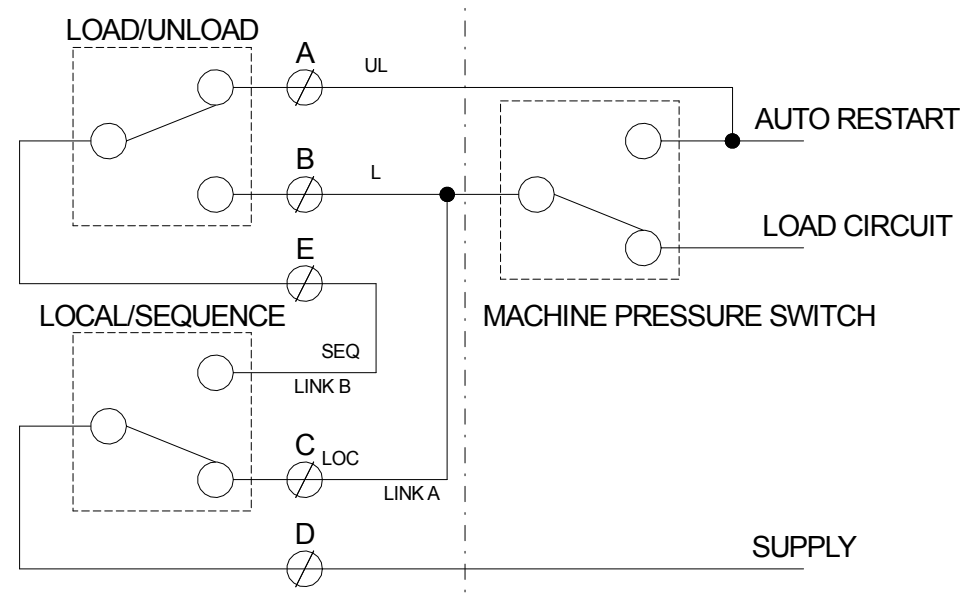

CONNECTION DIAGRAM FOR FL6E&UE CONTROLLERS TO 3 WIRE PRESSURE CONTROLLED MACHINES. FOR 2 WIRE PRESSURE SWITCHES, LEAVE OUT CONNECTION TO AUTO RESTART FROM TERMINAL A. FOR WIRE NUMBERS REFER TO TABLE IN INSTALLATION INSTRUCTIONS.

CONTROLLER


MACHINE

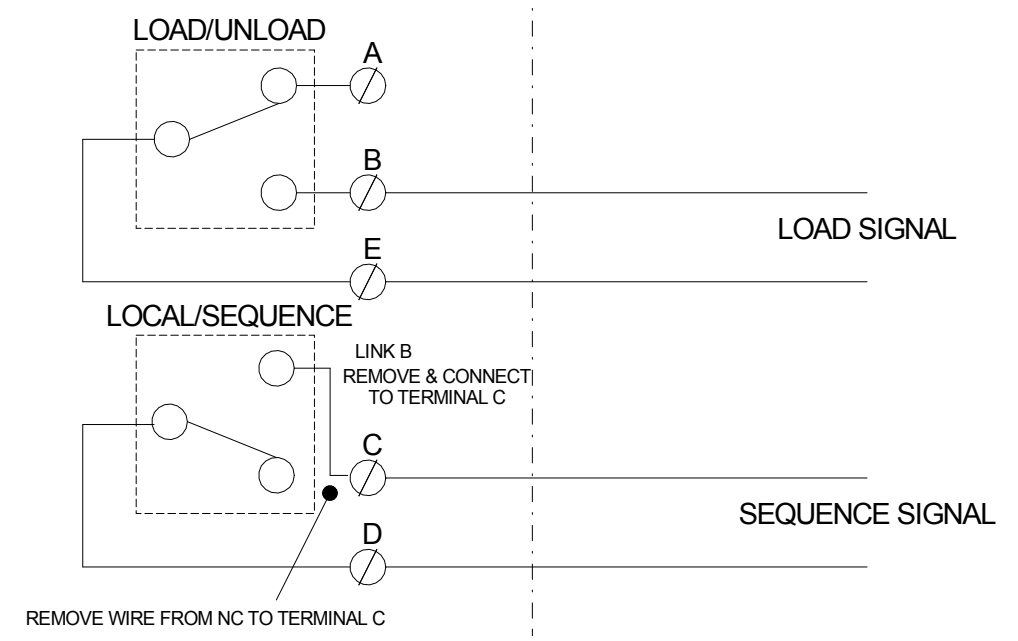

CONNECTION DIAGRAM FOR FL6E&UE CONTROLLERS TO ATLAS COPCO ELEKTRONIKON MACHINES. FOR WIRE NUMBERS REFER TO TABLE IN INSTALLATION INSTRUCTIONS.

CONTROLLER

MACHINE

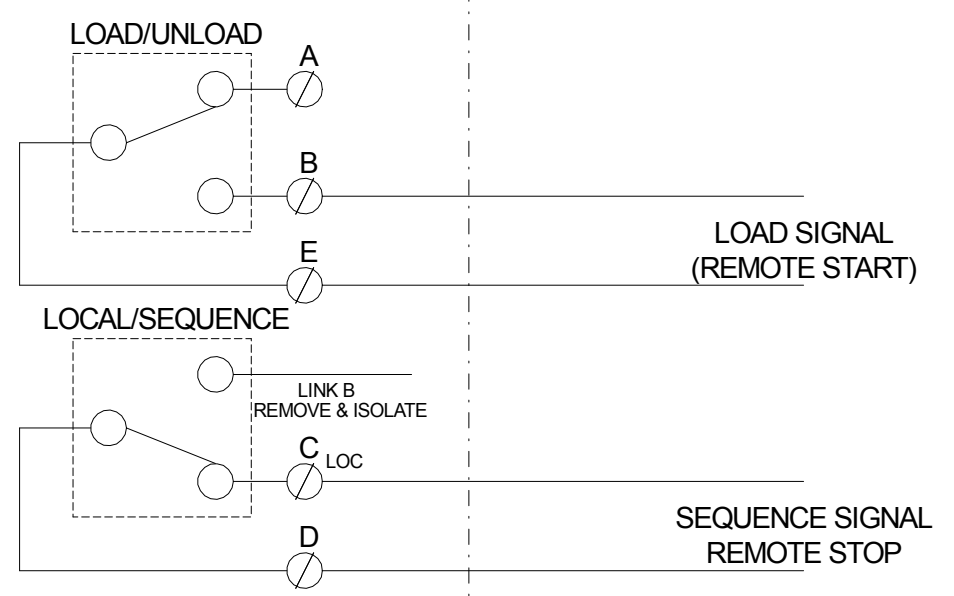

CONNECTION DIAGRAM FOR FL6E&UE CONTROLLERS TO INGERSOLL-RAND INTELLISYS(22-150KW) MACHINES. FOR WIRE NUMBERS REFER TO TABLE IN INSTALLATION INSTRUCTIONS.

Itemref	Quantity	Title/Name, designation, material, dimension etc			Article No./Reference	
Designed by DBT	Checked by	Approved by - date	Filename FL6STD	Date FEB2001	Scale NTS	
WIRING DIAGRAM FOR FL6E & UE CONTROLLERS			TPA ELECTRONICS			
			FL6WIRING	Edition	Sheet	